

# Caryford Community Hall - Basic Mood Lighting Instructions

## 1). TURNING ON

Turn on the two 13A sockets immediately above the shelf (Power to Controller and Di-Fi)

Turn on the two light switches on the brick pier (Power to Lights)




## 2). CHOOSE A PRESET SCENE

This is the simplest option unless you have experience of manually setting up the lights on the controller - just press the button.

### PRESET SCENES

1. All Off
2. 8 x Cool White
3. 8 x Warm White
4. 4 x Cool White (Window End)
5. 8 x Colour Mix
6. 8 x Colour Mix (Dimmed)
7. 4 x Colour + 2 x White (Stage)

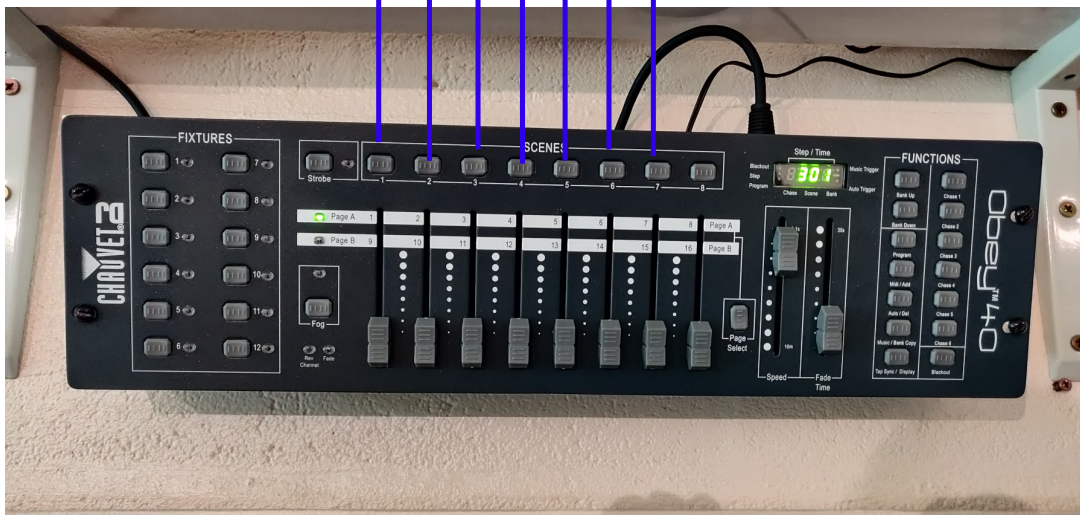

## 3). TURNING OFF (PLEASE DON'T FORGET!)

Turn off both the two 13A sockets immediately above the shelf and the two light switches on the brick pier